 


HOW TO TURN ON THE JUMPY CO. GENERATOR.


Step 1: Disconnect all plugs from Panel Receptacle

Ensure that the connector connecting your load to the generator is plugged out. You can also achieve this by simply keeping the control switch on neutral or keeping the generator switch in the off position. Never start your power generator loaded.

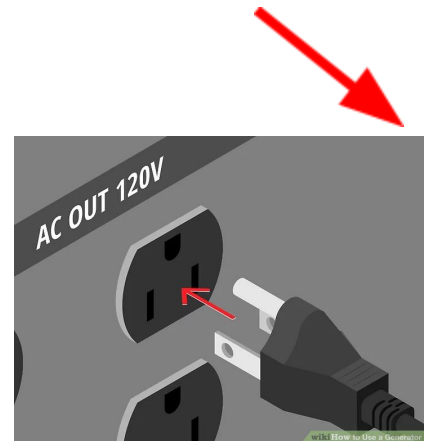

Step 2: Turn on the fuel valve

This will enable fuel to flow into the carburetor in readiness for the generator start and continuous operation.

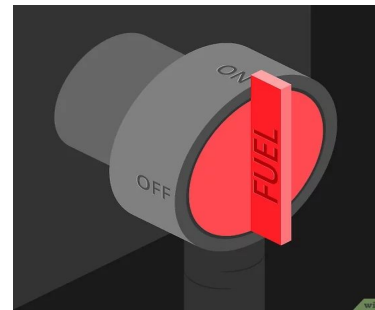

Step 3: Move choke to closed position

You can identify the choke rod from the image to the right. Normally the choke is closed by moving the rod from right to left.

Step 4: Turn on Engine Switch


Generator will have an engine switch, which you must put to the on position before you can start your generator.



Step 5: Start Engine & Generator

Most generators have either of two starting methods. Use the recoil starter (rope and grip)

To start a generator with a recoil starter pull the rope lightly until you feel some resistance, then apply a fast pull.

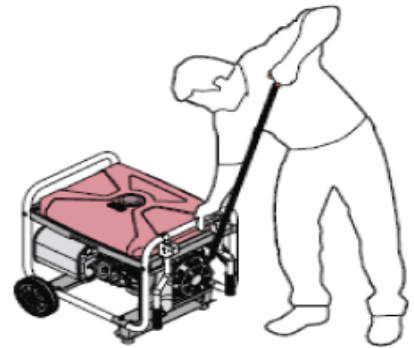

Step 6: Move choke to open position

The choke must now be moved back to its rest position. This is usually done for most generators by moving the rod from left to right. This should be done once the generator starts.

Step 8: Connect Load

You should now connect your load. This is done by connecting the panel receptacle or switching your isolation switch to the generator position.

